


E4E2

Ideal for Detecting Transparent Film, Transparent Bottles, and Clear Plastic Containers

- Compact, vertical design with built-in Amplifier allows easy mounting on small conveyor lines.
- Detects as far as 500 mm away.
- Equipped with stability indicator.



 Be sure to read *Safety Precautions* on page 1160.

Ultrasonic Sensors

Sensing Guide

Ultrasonic Sensors

Other Information

Ordering Information

Sensing method	Sensing distance	Output configuration	Model *
Through-beam	500 mm	NPN open collector NO (normally open)	E4E2-TS50C1

* The E4E2-TS50C2 with a NC (normally closed) output configuration is also available.

E4C-UDA

E4E2

E4B

E4C

Ratings and Specifications

Item	Model	E4E2-TS50C1
Sensing distance		500 mm
Standard sensing object		40 × 40 × 2 mm SPCC plate
Response frequency		20 Hz max.
Power supply voltage (operating voltage range)		24 VDC (21.6 to 26.4 V) with a max. ripple (p-p) 10%
Current consumption	E4E2-TS50TC1 Emitter:	25 mA max. at 24 VDC
	E4E2-TS50RC1 Receiver:	15 mA max. at 24 VDC
Control output		NPN open collector, Load voltage: 26.4 V DC max., Load current: 100 mA max. (Residual voltage: 1 V max.)
Indicators	Emitter:	Power indicator (red)
	Receiver:	Operation indicator (red), Stability indicator (green)
Ambient temperature		Operating: 0 to 50°C, Storage: -10 to 55°C (with no icing or condensation)
Ambient humidity		Operating and storage: 35% to 85% (with no condensation)
Insulation resistance		100 MΩ min. (at 500 VDC) between current-carrying parts and case
Dielectric strength		1,500 VAC (50/60 Hz) for 1 min between current-carrying parts and case
Vibration resistance		Destruction: 10 to 55 Hz, 1.5-mm double amplitude for 2 hours each in X, Y, and Z directions
Shock resistance		Destruction: 500 m/s ² three times each in X, Y, and Z directions
Degree of protection		IP64 (IEC)
Connection method		Pre-wired (Standard cable length: 2 m)
Weight (packed state)		Approx. 160 g (Emitter and Receiver)
Materials		Case: ABS resin, Oscillator surface: Epoxy resin
Accessories		Mounting Bracket (with screws), adjustment screwdriver, instruction sheet

Ultrasonic Sensors


Sensing Guide

Ultrasonic Sensors



Other Information

Engineering Data (Typical)

Sensing Range

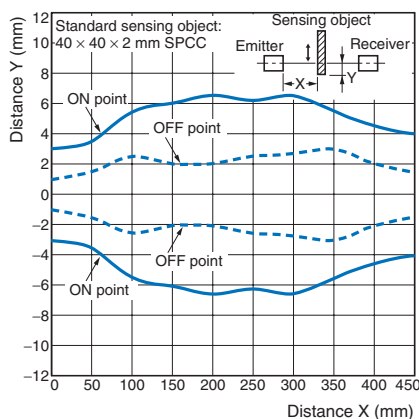

Sensing Distance and Sensing Object Parallel Movement

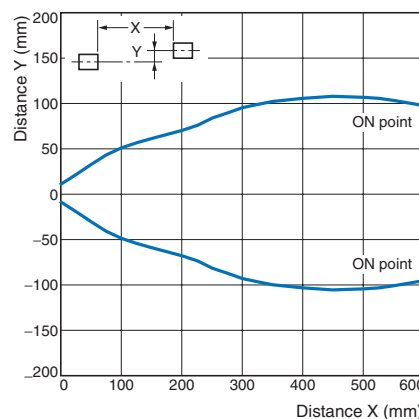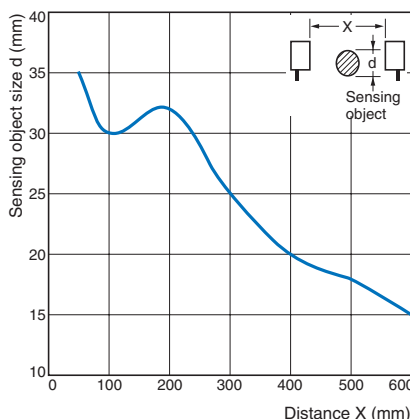

I/O Circuit Diagrams

Output configuration	Model	Operating mode	Timing chart	Output circuit
NPN output	E4E2-TS50C1	No-incident ON	<p>Incident sound: ON (green bar), OFF (white bar)</p> <p>No incident sound: OFF (white bar), ON (green bar)</p> <p>Control output (NPN open collector): ON (green bar), OFF (white bar)</p> <p>Operation indicator (red): ON (green bar), OFF (white bar)</p>	<p>Ultrasonic Sensor main circuit</p> <p>Load (24 VDC ± 10%)</p> <p>Black (output) 100 mA max.</p> <p>Blue 0 V</p>

E4C-JDA

E4E2

E4B

E4C

E4E2

Safety Precautions

Refer to *Warranty and Limitations of Liability* on page F-2.

WARNING

This product is not designed or rated for ensuring safety of persons. Do not use it for such purpose.



Precautions for Correct Use

Do not use the product in atmospheres or environments that exceed product ratings.

● **Designing the System**

Power ON

The E4E2 needs a maximum of 100 ms to be ready to operate after the E4E2 is turned ON. If power is supplied to the E4E2 and the load independently, be sure to turn ON the E4E2 first.

● **Installation**

Mounting

Mount the Emitter and Receiver so that they face each other in a straight line, and so that they are within the specified sensing distance.

Mutual Interference

If more than one Sensor is closely mounted together or used in a narrow space, mutual interference of the Sensors will result.

● **Adjustment**

Sensitivity Adjuster

- Check the power indicator (red) of the Emitter, then turn the sensitivity adjuster (ADJ) clockwise as far as it will go.
- Be sure not to turn the sensitivity adjuster excessively. If the sensitivity adjuster is turned beyond the permissible range, no sensitivity adjustment will be possible.


Indicators

- The green indicator on the Receiver shows stability during sound input. Adjust the mounting shaft so that this indicator light brightly when there is no sensing object present.
- While passing a sensing object through the path, adjust the operation indicator (red) on the Receiver so that it light and goes out correctly.

Dimensions


Emitter

E4E2-TS50TC1

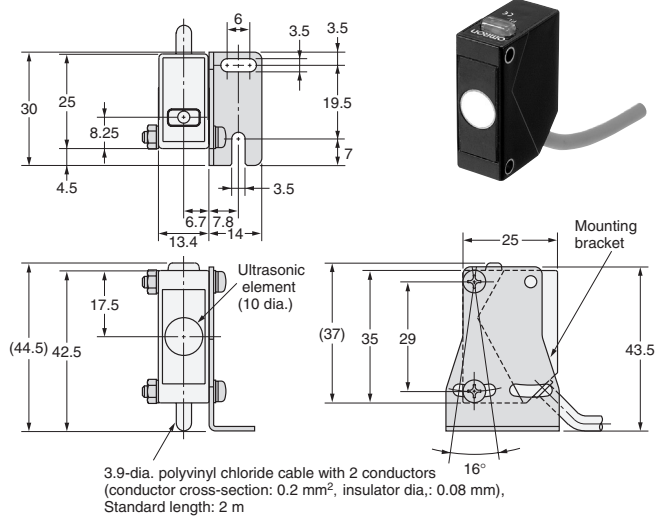

Receiver

E4E2-TS50RC1

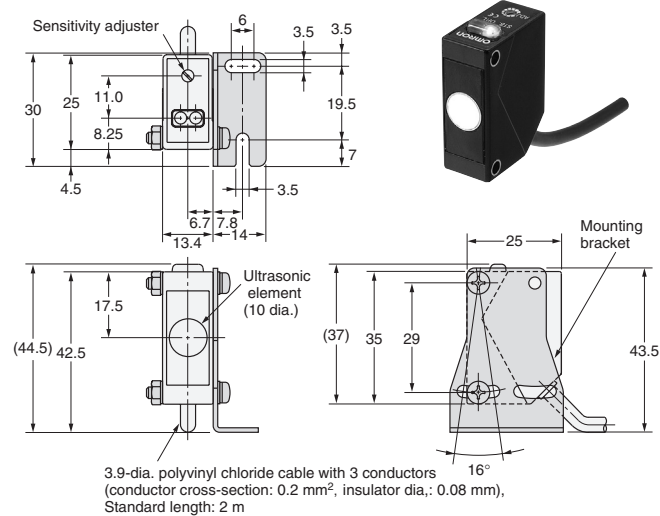

Ultrasonic
Sensors

Sensing
Guide

Ultrasonic
Sensors

Other
Information

E4C-UDA

E4E2

E4B

E4C